

Model: TT-02

Date Issued: March 25, 2011

Subject: Troubleshooting Guide


---

**Issue:** No Image from Document Camera output

**Most Common Cause:** The output selection switch is set to the improper position.

**Solution:** Reset output selection switch to proper position (See Figure 1)

**Secondary Solution:** Factory service is required. Reference ELMO Service and Repair Instructions.

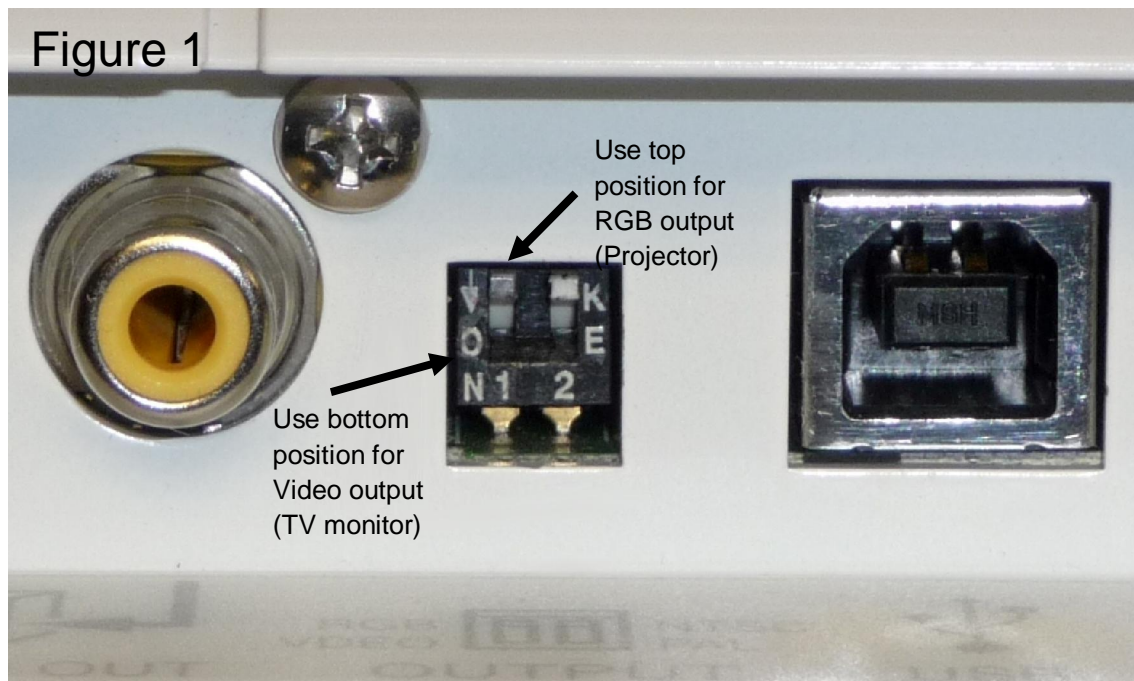

**Issue:** Flashing green power button LED

**Most Common Cause:** Faulty AC adapter

**Solution:** Replace with known working AC adapter to check operation. If operation is confirmed with known working AC adapter please contact ELMO Technical Support.

**Secondary Cause:** Faulty TT-02 mainboard

**Solution:** Factory service is required. Reference ELMO Service and Repair Instructions.

---