

Model: TT-02u

Date Issued: March 25, 2011


Subject: Troubleshooting Guide

Issue: No Image from Document Camera output

Most Common Cause: The output selection switch is set to the improper position.

Solution: Reset output selection switch to proper position (See Figure 1)

Secondary Solution: Factory service is required. Reference ELMO Service and Repair Instructions.

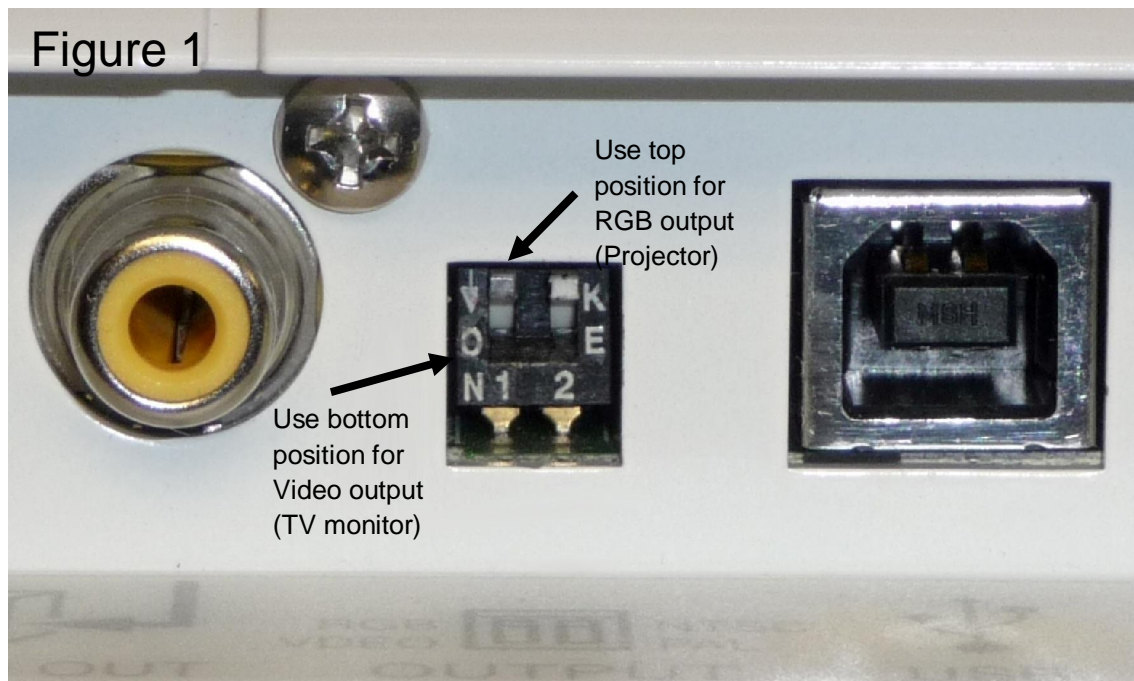

Issue: Flashing green power button LED

Most Common Cause: Faulty AC adapter

Solution: Replace with known working AC adapter to check operation. If operation is confirmed with known working AC adapter please contact ELMO Technical Support.

Secondary Cause: Faulty TT-02u mainboard

Solution: Factory service is required. Reference ELMO Service and Repair Instructions.
