



QUICK TRAINING GUIDE: TT-12

Training Video: <http://www.elmoussa.com/tt-12-interactive-document-camera>




1 Configure your classroom

Basic Configuration

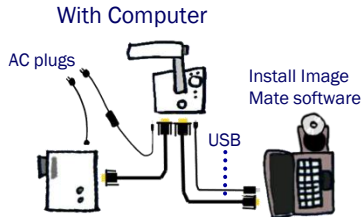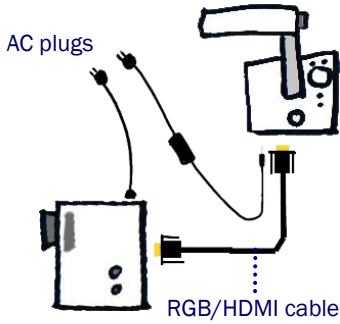

With Interactive Whiteboard

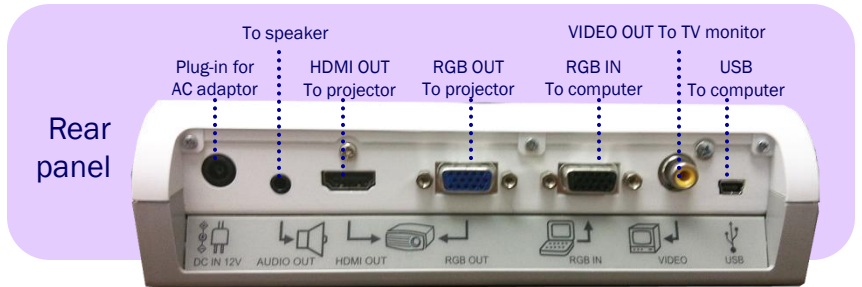

2 Power on the TT-12 Zoom and Focus


Twist the zoom knob to zoom in/out




Press the Auto-focus button to focus after zooming.

3 Rotate

Rotate the camera column close to a small object, turn the camera head horizontally to view students giving a presentation, speech, etc.

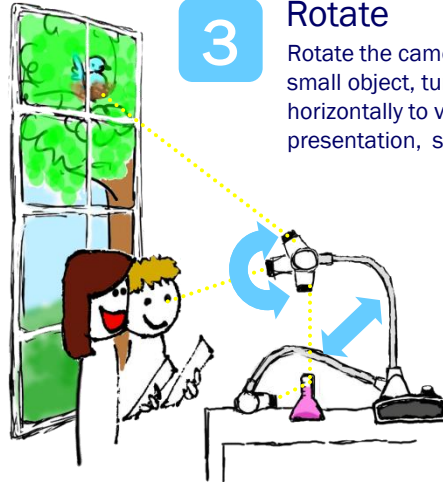


Rotate the arm 180° and position camera head downward for left-handed users.

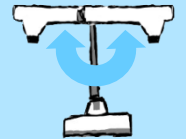


4 Capture and Review

A. Insert SD card/USB flash drive

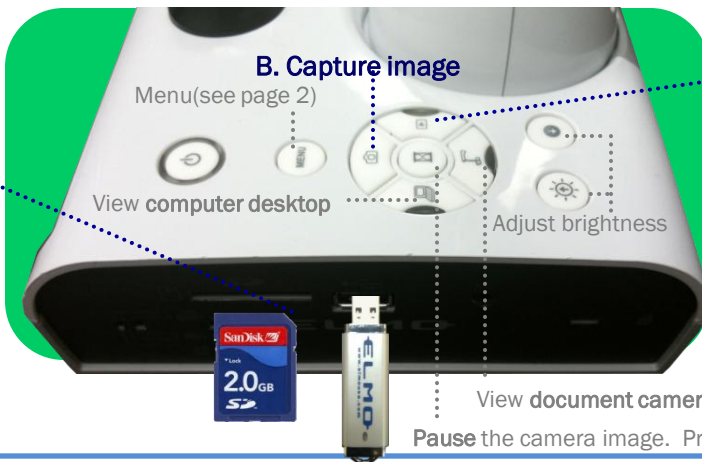

C. Review saved images

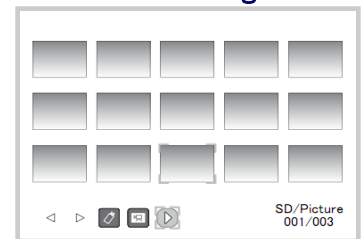

Use buttons to scroll and select.

5 Control the TT-12 from anywhere in the classroom

Power **Auto-focus:** Press after zooming

Zoom The **Highlight** allows you to emphasize a specific area of the image. Move the highlight using arrow buttons [▲][▶][▼][◀].

Adjust brightness The **Mask** feature lets you to hide the answer to a written problem or following along when reading text, etc. To move the mask, use [▲][▶][▼][◀].

View images/videos from SD card Press the **Scroll** to zoom instantly then use [▲][▶][▼][◀] to scroll around your image.

Take a picture and save to SD card **Compare picture:** Compare the live image to a saved image from the SD card.

Record video Start and stop video recording
TT-12 mic records audio when recording video. **View computer desktop**

Return to live image

6 Additional Menu features

Press the Menu button to **customize preferences** and apply special modes such as Mosaic and Microscope.

Use **Microscope mode** with the *Optional Microscope Attachment* to display slide images for the entire class to see at once.

Capture students' curiosity by applying the **Mosaic** feature, letting them predict the displayed object.

7 Install Image Mate software

Connect the TT-12 to a computer and install Image Mate to **save images and videos to the computer**. You can also **annotate on the live image and record time-lapse photography** (set interval time in Settings before beginning time-lapse)

Remote to control the document camera from the desktop

Open previously saved files

Select the time-lapse interval, file format, etc.

Take a picture and save to computer

View live image

Record video and time-lapse photography

Download Image Mate at <http://www.elmoussa.com/t-12-interactive-document-camera>