

QUICK TRAINING GUIDE:


TT-02RX + CRA-1 Wireless Tablet

Setting up



Configure your classroom. See configurations below.

Standard Configuration

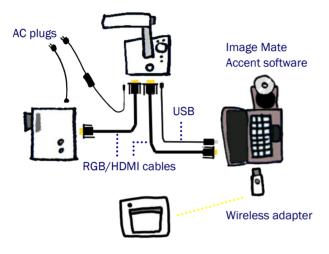

2

Insert batteries into CRA-1 and pen. Charge CRA-1 via USB cable.

Interactive Whiteboard Configuration



Rear panel



TT-02RX Basics



Press the Auto-focus button to focus after zooming.



Rotate

Rotate the camera column close to a small object or turn the camera head horizontally to view students giving a presentation, speech, etc.



CRA-1 Wireless Tablet + Image Mate Accent

Power on TT-02RX and CRA-1
Wireless Tablet. Insert Wireless
Adapter into computer.

Ensure Image Mate Accent has been installed.

